ASSEMBLY INSTRUCTIONS

L-GZ806PAL-C

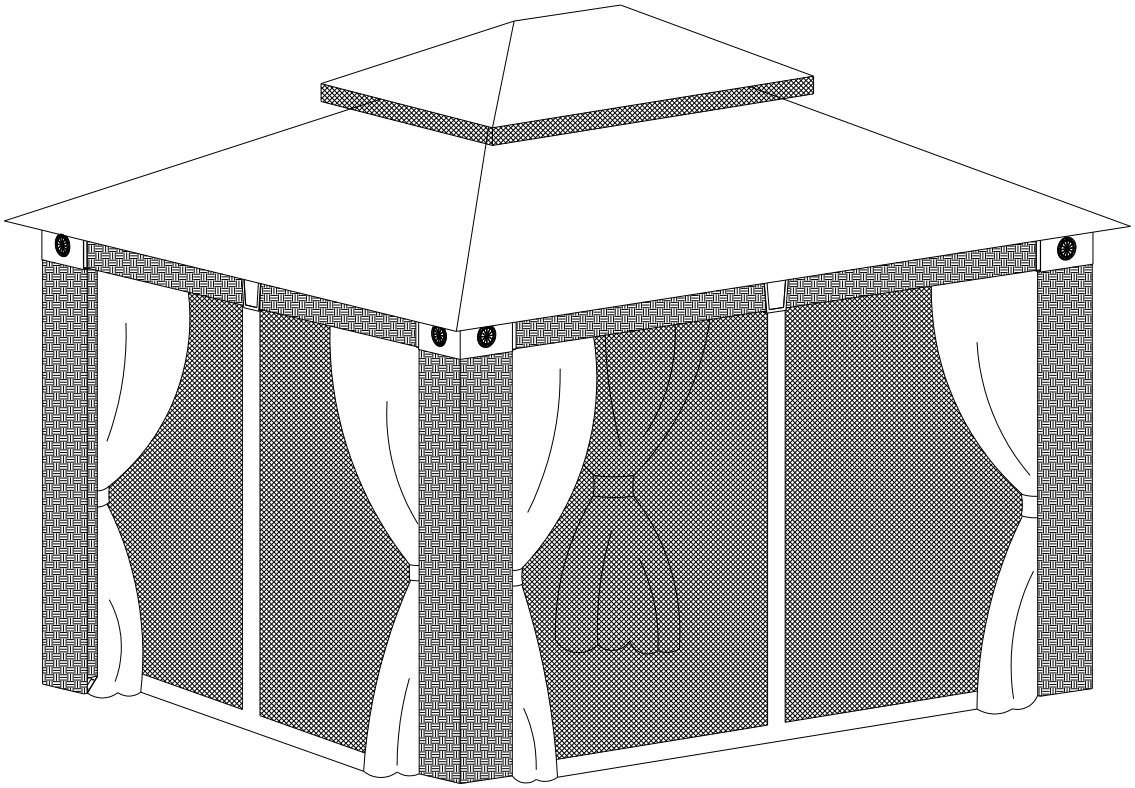

Our clear, easy-to-follow, step-by-step instructions will guide you through the project from start to finish. The final product will be a quality piece that will go together smoothly and give years of enjoyment.

IMPORTANT:

Please read instructions thoroughly before assembly. Familiarize yourself with the inventory of parts and the accompanying illustrations to assure safe and proper assembly.

Periodically check all bolted connections on your gazebo to make sure they are tight and secure. Please keep the instructions for future reference.

All you will need is a step ladder (not included).

Item Identification: For ease of identification, all parts are labeled to correspond to the Step number in which the part is used.

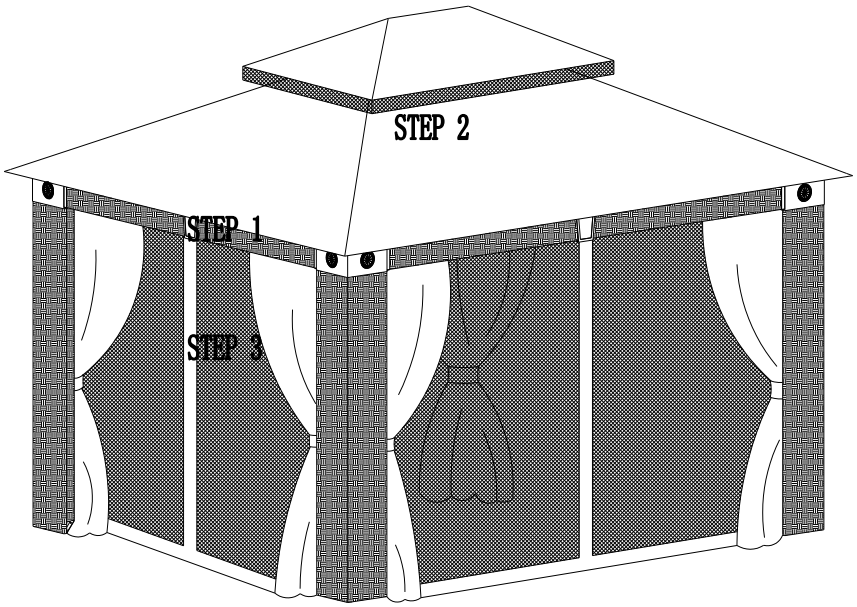

WARNINGS:

1. Assembly Instructions must be followed.
2. Stakes supplied must be used to hold this gazebo in place when upright.
3. Warranty does not cover damage due to extreme weather conditions.

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.

This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

This unit is heavy. Do not assemble this item alone.

IMPORTANT:

1. When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment. Please read all instructions before assembly and use.
2. Some parts may contain sharp edges, wear protective gloves if necessary. At least **two** or more people are recommended for safe assembly.
3. Keep all children and pets away from assembly area.
4. At least 6 feet from any obstruction such as fence, garage, house, overhanging branches, laundry line or electrical wires.
5. Do not use the unit during an electrical storm, as there is a remote chance of getting struck by lightning.
6. Do not leave the gazebo assembled when there is a risk of high wind, as possible damage will occur to the structure. Remove fabric roof and secure screen & privacy panels.
7. Install on level surface.
8. Never barbecue under this gazebo or use lanterns that have open flames.
9. This package contains small items and plastic bags that should be kept away from children.
10. Check all screws for tightness before and during usage. Ensure that all connectors and poles are firmly secured in position fully. It is important to do so before use so as to avoid a possible collapse or damage to the item, which could also result in injury.
11. This gazebo is intended for decorative and sunshade purposes only and is not meant to withstand extreme weather conditions including high winds, torrential rain and snow. Gazebo fabric is water resistant, not water proof and may leak during exposure to precipitation.

PARTS LIST

Wicker panel	A	4	
Crossbeam (long side)	B	2	
Crossbeam (short side)	C	2	
Slanting bar	D	4	
Middle beam	E	4	
Screw	F	36	
Corner connector (big top frame)	G	4	
Big top frame bar (long side)	H	2	
Big top frame bar (short side)	I	2	
Small top beam	J	1	
Small top slanting bar	K	4	
Center hook	L	1	
Crossbeam centerpiece	M	4	
Mosquito netting bar (long side)	N	4	
Mosquito netting bar (short side)	O	4	
Small canopy	P	1	
Big canopy	Q	1	
Mosquito netting	R	1	
Walls	S	1	

ASSEMBLY INSTRUCTIONS:

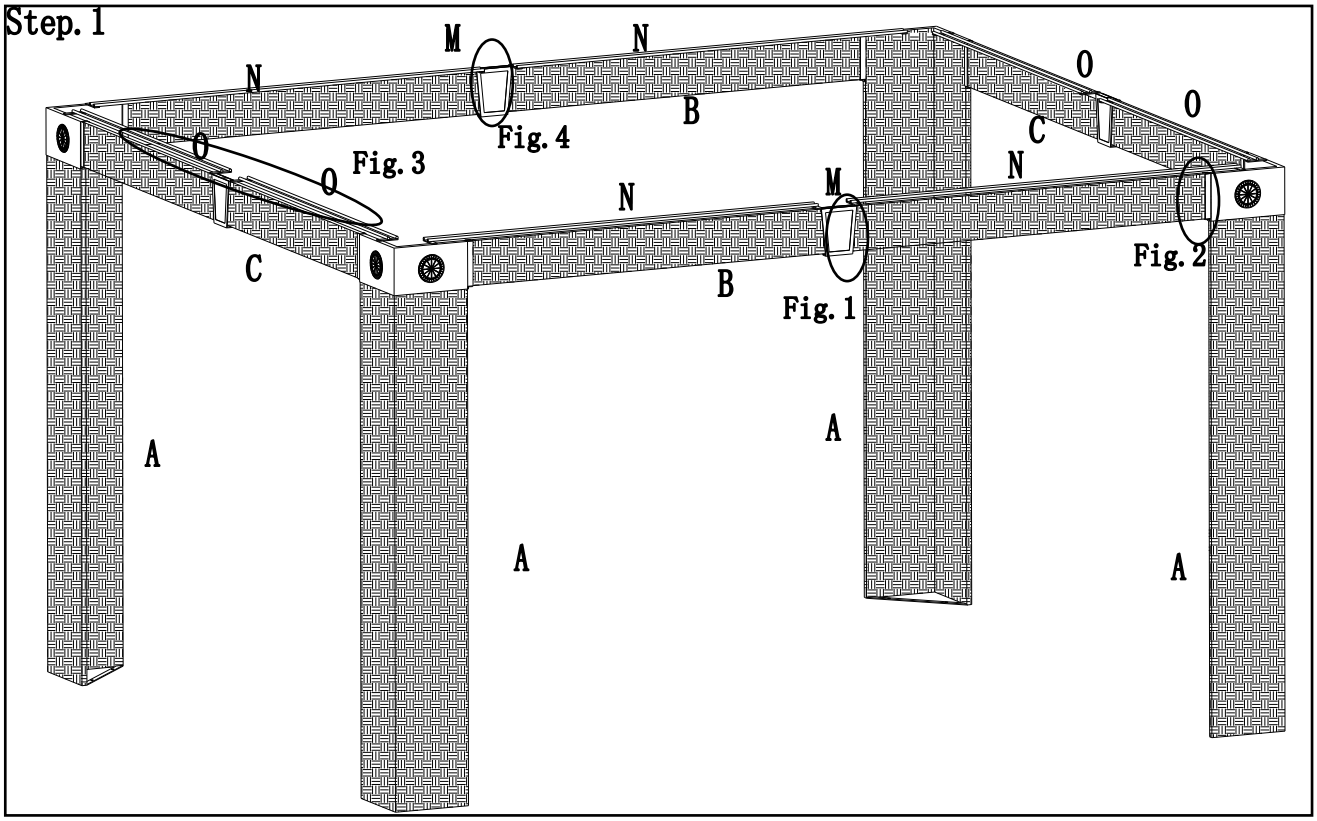

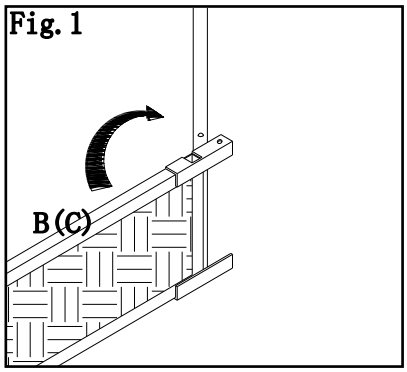

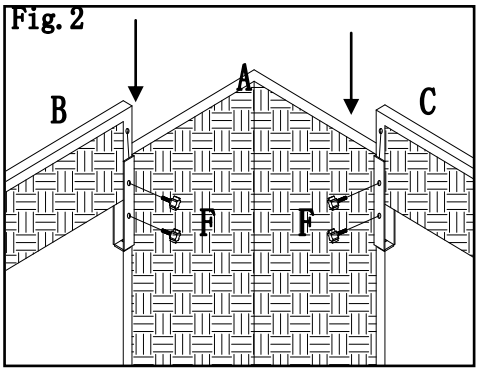

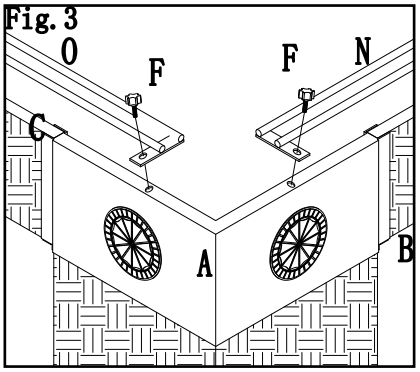

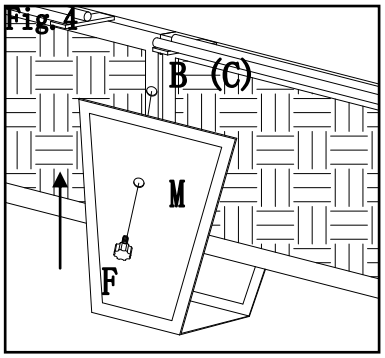

Fig.1: Spread the crossbeam (B & C) to straight till fix by the elastic buckling.

Fig.2: Insert the crossbeam (B & C) into card slot of the wicker panel (A), fix them by screw (F).

Fig.3: Connect the mosquito netting bar N (O) to the wicker panel (A) and the crossbeam B (C) by the screw (F).

Fig.4: Connect the crossbeam centerpiece (M) to the middle of the crossbeam (B & C) by the screw (F).

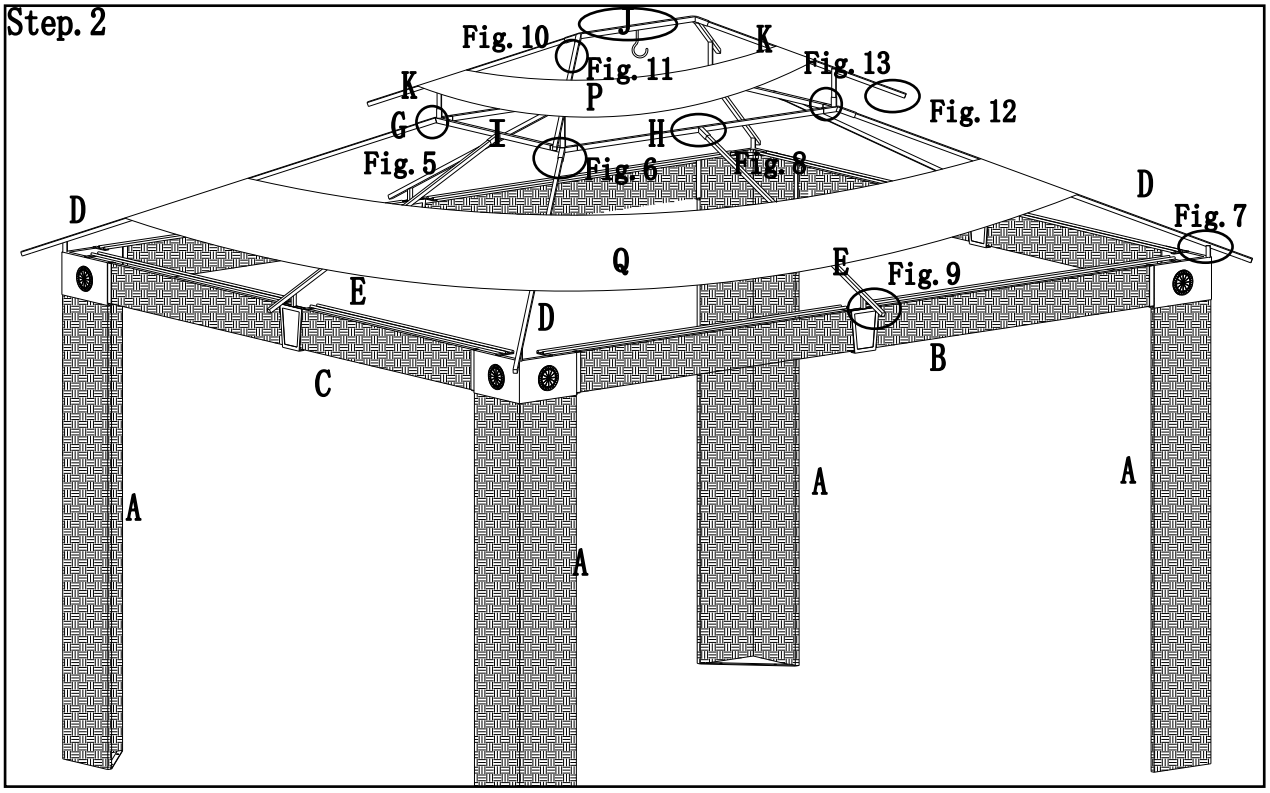

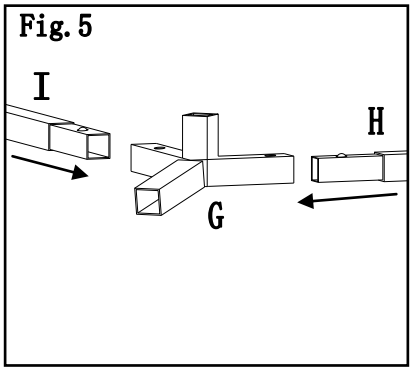

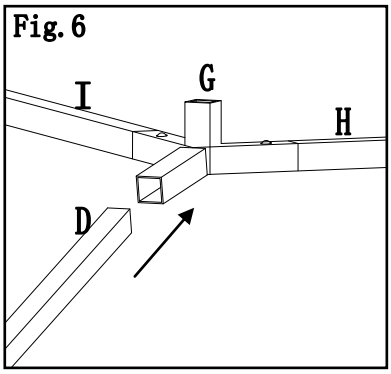

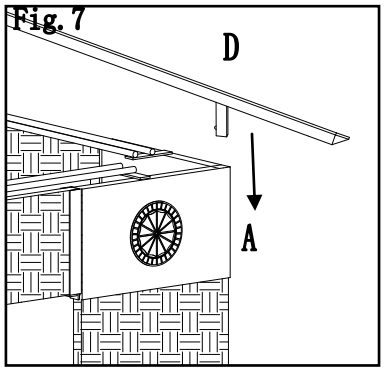

Fig.5: Insert the big top frame bar (H & I) to the big top corner connector (G).

Fig.6: Insert the slanting bar (D) to the big top corner connector (G).

Fig.7: Insert another end of slanting bar (D) to the wicker panel (A).

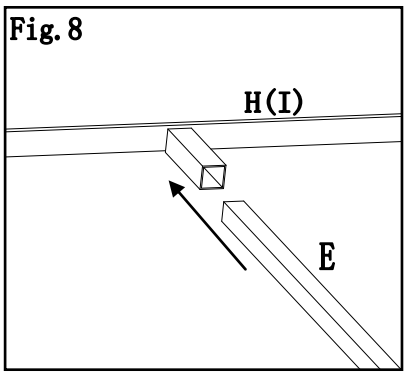

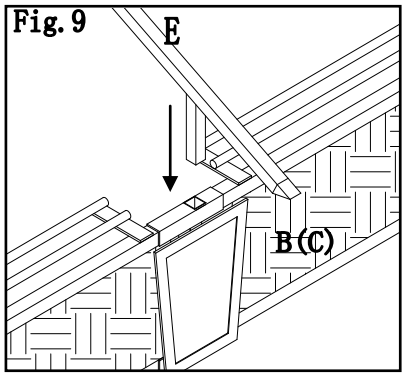

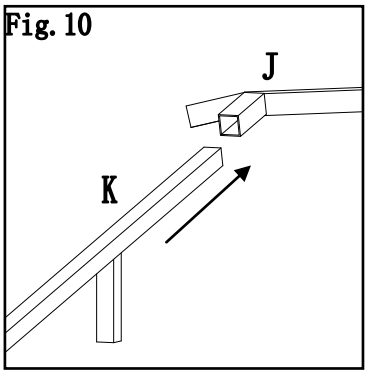

Fig.8: Insert the middle beam (E) to the big top frame bar (H or I).

Fig.9: Insert another end of middle beam (E) to the middle of crossbeam (B or C).

Fig.10: Insert the small top slanting bar (K) to the small top beam (J).

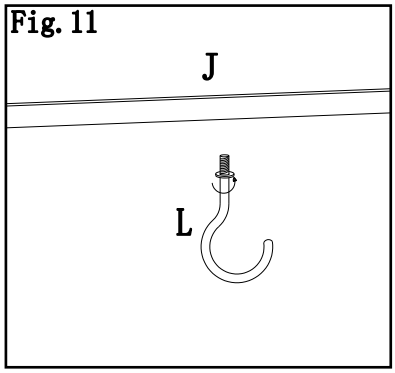

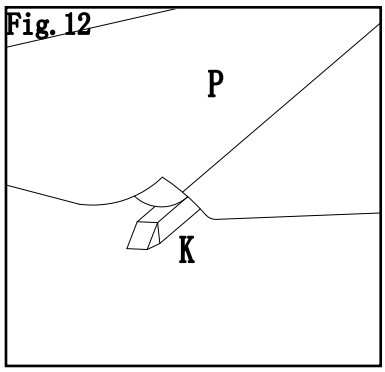

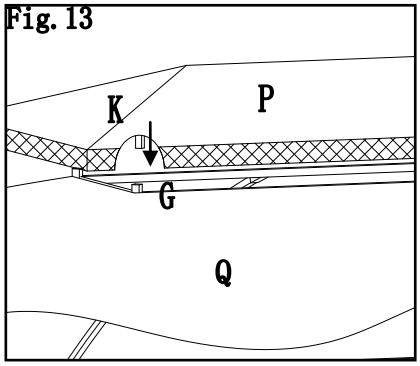

Fig.11: Screw the center hook (L) to the middle of the small top beam (J).

Fig.12: Attach the small canopy (P) to the small top along the small top slanting bar (K), aligning the corners and stretching it to fit.

Fig.13: Place the big canopy (Q) to big top, **do not spread here.** Insert the small top slanting bar (K) to the big top corner connector (G).

Hardware Pack

GG	Plastic ring	104 PCS	
FF	¢6*180 stake	16 PCS	

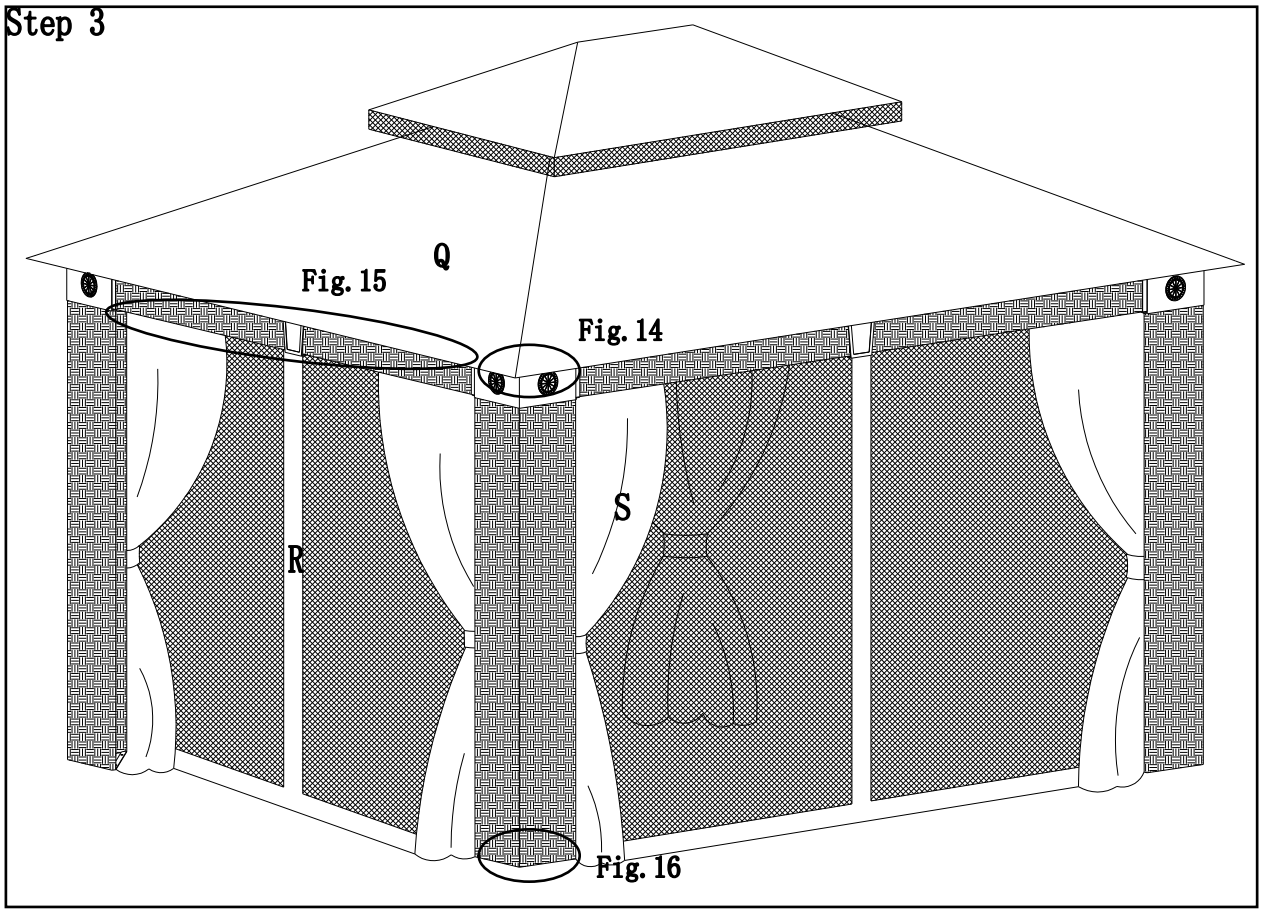

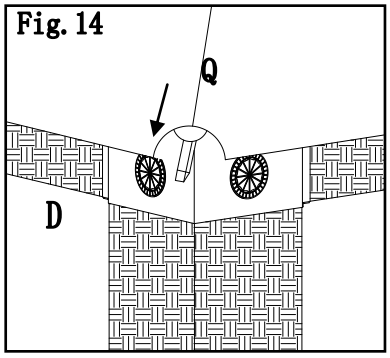

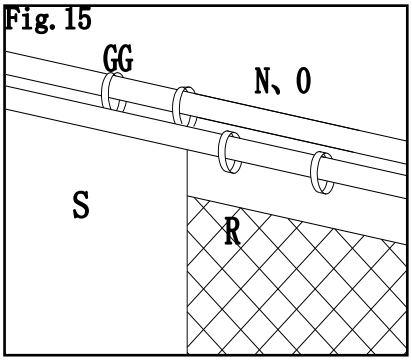

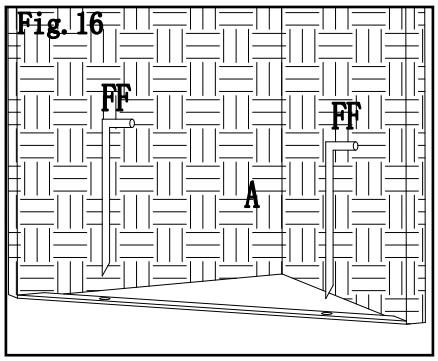

Fig.14: Spread the big canopy (Q) along the slanting bar (D), aligning the corners and stretching it to fit, then stick inner valance together.

Fig.15: Hang the wall (S) on the outside of mosquito netting bar (N & O) by plastic ring (GG), and hang the mosquito netting (R) on the inside of mosquito netting bar.

Fig.16: Fix assembled gazebo to lawn with stake (FF).

Now, your Gazebo is ready for use.

LIMITED WARRANTY:

This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes.

The item is warranted to be free from defects in material or workmanship for a period of **one (1) year.** If any defect is found, please call our customer service department at 1-866-578-6569 for help. The manufacturer will not cover transportation or delivery costs, or compensate the individual or any outside party for assembling or disassembling the product. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

EXCLUSIONS: Items used for commercial, contract, or other non-residential purposes, or items damaged due to acts of nature, vandalism, misuse, or improper assembly are not covered. Corrosion or rusting of hardware is not covered. Proof of purchase (dated register receipt) is required for warranty claims. Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.

Please do not return this product to the store. For technical assistance on assembly or replacement parts call Sunjoy Industries at 1(866) 578-6569 from 8:30 AM to 4:30 PM EST or Email customer.care@sunjoygroup.com or visit www.sunjoyonline.com to place your order or fax your parts replacement order form together with your purchase receipt to 1 (740) 283-3549 for assistance.

Made in China